



COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|--|----------|--------|--------|
| LIQUID LINE FILTER DRIER DML - FLARE | | | |
| Danfoss 032 Drier - 1/4 Flare | 023Z5035 | 1/4" | DF032 |
| Danfoss 033 Drier - 3/8 Flare | 023Z5036 | 3/8" | DF033 |
| Danfoss 052 Drier - 1/4 Flare | 023Z5037 | 1/4" | DF052 |
| Danfoss 053 Drier - 3/8 Flare | 023Z5038 | 3/8" | DF053 |
| Danfoss 082 Drier - 1/4 Flare | 023Z5039 | 1/4" | DF082 |
| Danfoss 083 Drier - 3/8 Flare | 023Z5040 | 3/8" | DF083 |
| Danfoss 084 Drier - 1/2 Flare | 023Z5041 | 1/2" | DF084 |
| Danfoss 163 Drier - 3/8 Flare | 023Z5043 | 3/8" | DF163 |
| Danfoss 164 Drier - 1/2 Flare | 023Z5044 | 1/2" | DF164 |
| Danfoss 165 Drier - 5/8 Flare | 023Z5045 | 5/8" | DF165 |
| Danfoss 303 Drier - 3/8 Flare | 023Z0049 | 3/8" | DF303 |
| Danfoss 304 Drier - 1/2 Flare | 023Z0050 | 1/2" | DF304 |
| Danfoss 305 Drier - 5/8 Flare | 023Z0051 | 5/8" | DF305 |
| Danfoss 306s Drier - 3/4 Flare | 023Z0193 | 3/4" | DF306 |
| Danfoss 413 Drier - 3/8" Flare | 023Z0108 | 3/8" | DF413 |
| Danfoss 414 Drier - 1/2" Flare | 023Z0109 | 1/2" | DF414 |
| Danfoss 415 Drier - 5/8" Flare | 023Z0110 | 5/8" | DF415 |
| LIQUID LINE FILTER DRIER DML - SOLDER | | | |
| Danfoss 032 Drier - 1/4 Solder | 023Z5048 | 1/4" | DF032s |
| Danfoss 033 Drier - 3/8 Solder | 023Z5050 | 3/8" | DF033s |
| Danfoss 052s Drier - 1/4 Solder | 023Z5053 | 1/4" | DF052s |
| Danfoss 053s Drier - 3/8 Solder | 023Z5054 | 3/8" | DF053s |
| Danfoss 082s Drier - 1/4 Solder | 023Z5037 | 1/4" | DF082s |
| Danfoss 083s Drier - 3/8 Solder | 023Z5058 | 3/8" | DF083s |
| Danfoss 084s Drier - 1/2 Solder | 023Z5061 | 1/2" | DF084s |
| Danfoss 163s Drier - 3/8 Solder | 023Z5064 | 3/8" | DF163s |
| Danfoss 164s Drier - 1/2 Solder | 023Z5067 | 1/2" | DF164s |
| Danfoss 165s Drier - 5/8 Solder | 023Z5068 | 5/8" | DF165s |
| Danfoss 303s Drier - 3/8 Solder | 023Z0067 | 3/8" | DF303s |
| Danfoss 304s Drier - 1/2 Solder | 023Z0068 | 1/2" | DF304s |
| Danfoss 305s Drier - 5/8 Solder | 023Z0069 | 5/8" | DF305s |
| Danfoss 306s Drier - 3/4 Solder | 023Z0070 | 3/4" | DF306s |
| Danfoss 307s Drier - 7/8 Solder | 023Z0071 | 7/8" | DF307s |
| Danfoss 414s Drier - 1/2" Solder | 023Z0111 | 1/2" | DF414s |
| Danfoss 415s Drier - 5/8" Solder | 023Z0112 | 5/8" | DF415s |
| Danfoss 417s Drier - 7/8" Solder | 023Z0113 | 7/8" | DF417s |
| Danfoss 419s Drier - 1 1/8" Solder | 023Z0114 | 1 1/8" | DF419s |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|--------------------------------------|----------|--------|------------|
| BURNOUT DRIER DAS - SOLDER | | | |
| Danfoss DAS164s Solder burnout drier | 023Z1009 | 1/2" | DAS164s VV |
| Danfoss DAS165s Solder burnout drier | 023Z1010 | 5/8" | DAS165s VV |
| Danfoss DAS167s Solder burnout drier | 023Z1012 | 7/8" | DAS167s VV |
| Danfoss DAS305s Solder burnout drier | 023Z1013 | 5/8" | DAS305s VV |
| Danfoss DAS306s Solder burnout drier | 023Z1014 | 3/4" | DAS306s VV |
| Danfoss DAS307s Solder burnout drier | 023Z1015 | 7/8" | DAS307s VV |
| Danfoss DAS309s Solder burnout drier | 023Z1016 | 1 1/8" | DAS309s VV |

| BI FLOW DRIER DMB - FLARE | | | |
|----------------------------------|----------|------|--------|
| Danfoss 082 Bi -Flow Drier | 023Z1412 | 1/4" | DMB082 |
| Danfoss 083 Bi -Flow Drier | 023Z1411 | 3/8" | DMB083 |
| Danfoss 084 Bi -Flow Drier | 023Z1410 | 1/2" | DMB084 |
| Danfoss 163 Bi -Flow Drier | 023Z1415 | 3/8" | DMB163 |
| Danfoss 164 Bi -Flow Drier | 023Z1414 | 1/2" | DMB164 |
| Danfoss 165 Bi -Flow Drier | 023Z1413 | 5/8" | DMB165 |

| BI FLOW DRIER DMB - SOLDER | | | |
|-----------------------------------|----------|------|---------|
| Danfoss 082s Bi -Flow Drier | 023Z1443 | 1/4" | DMB082s |
| Danfoss 083s Bi -Flow Drier | 023Z1442 | 3/8" | DMB083s |
| Danfoss 084s Bi -Flow Drier | 023Z1441 | 1/2" | DMB084s |
| Danfoss 163s Bi -Flow Drier | 023Z1446 | 3/8" | DMB163s |
| Danfoss 164s Bi -Flow Drier | 023Z1445 | 1/2" | DMB164s |
| Danfoss 165s Bi -Flow Drier | 023Z1444 | 5/8" | DMB165s |
| Danfoss 307s Bi -Flow Drier | 023Z1447 | 7/8" | DMB307s |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|----------|------|-------|
| MOISTURE INDICATOR - SIGHT GLASS - FLARE | | | |
| Danfoss sight glass - 1/4 Flare | 014-0161 | 1/4" | SGN6 |
| Danfoss sight glass - 3/8 Flare | 014-0162 | 3/8" | SGN10 |
| Danfoss sight glass - 1/2 Flare | 014-0163 | 1/2" | SGN12 |
| Danfoss sight glass - 5/8 Flare | 014-0165 | 5/8" | SGN16 |
| Danfoss sight glass - 3/4 Flare | 014-0166 | 3/4" | SGN19 |

| MOISTURE INDICATOR - SIGHT GLASS - SOLDER | | | |
|--|----------|------|--------|
| Danfoss sight glass - 1/4 Solder | 014-0181 | 1/4" | SGN6S |
| Danfoss sight glass - 3/8 Solder | 014-0182 | 3/8" | SGN10S |
| Danfoss sight glass - 1/2 Solder | 014-0183 | 1/2" | SGN12S |
| Danfoss sight glass - 5/8 Solder | 014-0184 | 5/8" | SGN16S |
| Danfoss sight glass - 3/4 Solder | 014-0185 | 3/4" | SGN19S |
| Danfoss sight glass - 7/8 Solder | 014-0186 | 7/8" | SGN22S |

| MOISTURE INDICATOR - SIGHT GLASS - MALE/FEMALE | | | |
|---|----------|------|----------|
| Danfoss sight glass - 1/4 M/F Flare | 014-0171 | 1/4" | SGN6M/F |
| Danfoss sight glass - 3/8 M/F Flare | 014-0172 | 3/8" | SGN10M/F |
| Danfoss sight glass - 1/2 M/F Flare | 014-0173 | 1/2" | SGN12M/F |
| Danfoss sight glass - 5/8 M/F Flare | 014-0174 | 5/8" | SGN16M/F |
| Danfoss sight glass - 3/4 M/F Flare | 014-0175 | 3/4" | SGN19M/F |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|----------------------------------|----------|------|-------|
| NON RETURN VALVE - FLARE | | | |
| Danfoss Check Valve - 1/4 Flare | 020-1040 | 1/4" | NRV6 |
| Danfoss Check Valve - 3/8" Flare | 020-1041 | 3/8" | NRV10 |
| Danfoss Check Valve - 1/2 Flare | 020-1042 | 1/2" | NRV12 |
| Danfoss Check Valve - 5/8 Flare | 020-1043 | 5/8" | NRV16 |
| Danfoss Check Valve - 3/4 Flare | 020-1044 | 3/4" | NRV19 |

| | | | |
|------------------------------------|----------|--------|--------|
| NON RETURN VALVE - SOLDER | | | |
| Danfoss Check Valve - 1/4 Solder | 020-1010 | 1/4" | NRV6s |
| Danfoss Check Valve - 3/8 Solder | 020-1011 | 3/8" | NRV10s |
| Danfoss Check Valve - 1/2 Solder | 020-1012 | 1/2" | NRV12s |
| Danfoss Check Valve - 5/8 Solder | 020-1018 | 5/8" | NRV16s |
| Danfoss Check Valve - 3/4 Solder | 020-1019 | 3/4" | NRV19s |
| Danfoss Check Valve - 7/8 Solder | 020-1020 | 7/8" | NRV22s |
| Danfoss Check Valve - 1 1/8 Solder | 020-1021 | 1 1/8" | NRV28s |

| | | | |
|-------------------------------|----------|------|-------|
| STOP VALVE - FLARE | | | |
| Danfoss Stop Valve 1/4" Flare | 009G0101 | 1/4" | BML6 |
| Danfoss Stop Valve 3/8" Flare | 009G0127 | 3/8" | BML10 |
| Danfoss Stop Valve 1/2" Flare | 009G0141 | 1/2" | BML12 |
| Danfoss Stop Valve 5/8" Flare | 009G0168 | 5/8" | BML15 |

| | | | |
|--------------------------------|-----------|------|--------|
| STOP VALVE - SOLDER | | | |
| Danfoss Stop Valve 1/4" Solder | 009G0102 | 1/4" | BML6s |
| Danfoss Stop Valve 3/8" Solder | 009G0122 | 3/8" | BML10s |
| Danfoss Stop Valve 1/2" Solder | 009G0142 | 1/2" | BML12s |
| Danfoss Stop Valve 5/8" Solder | 009G01692 | 5/8" | BML15s |
| Danfoss Stop Valve 3/4" Solder | 009G0181 | 3/4" | BML18s |
| Danfoss Stop Valve 7/8" Solder | 009G0191 | 7/8" | BML22s |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|------------|------|--------|
| MECHANICAL THERMOSTAT - COMMERCIAL | | | |
| Danfoss auto t-stat with 2m capillary | 060L110066 | -15 | KP61 |
| RT 107 Thermostat | 017-513666 | | |
| Danfoss 077B66 electrolux service | 077B6043 | | 077B66 |

| | | | |
|--|----------|--|-------|
| MECHANICAL THERMOSTAT - SERVICE KITS | | | |
| Danfoss Service Stat- Refrigerators | 077B7001 | | SKIT1 |
| Danfoss Service Stat- Refrig Man. Defrost | 077B7002 | | SKIT2 |
| Danfoss Service Stat- Refrig Auto. Defrost | 077B7003 | | SKIT3 |
| Danfoss Service Stat- Absorption Refrig | 077B7004 | | SKIT4 |
| Danfoss Service Stat- Ice cream cab- no signal | 077B7005 | | SKIT5 |
| Danfoss Service Stat- Freezers with active signal | 077B7006 | | SKIT6 |
| Danfoss Service Stat- Freezers with passive signal | 077B7007 | | SKIT7 |
| Danfoss Service Stat- Bottle and liquid coolers | 077B7008 | | SKIT8 |

| | | | |
|------------------------------------|----------|--|--------|
| KP SERIES MOUNTING BRACKETS | | | |
| Danfoss Wall mounting bracket | 060-1055 | | KPWALL |
| Danfoss Angle mounting bracket | 060-1056 | | KPANGL |

| | | | |
|---|------------|-------|-------|
| KP PRESSURE CONTROLS | | | |
| Danfoss dual pressure control - 1/4" AA | 060-124166 | HP/LP | KP15F |
| Danfoss dual pressure control - 1/4" AM | 060-124366 | HP/LP | KP15F |
| Danfoss high pressure control - 1/4" | 060-117166 | HP | KP5F |
| Danfoss low pressure control - 1/4" | 060-110166 | LP | KP1F |
| KP 15 Weather Cover | 060-003266 | HP/LP | |

| | | | |
|--|------------|--|--|
| KP PRESSURE CONTROL ACCESSORIES | | | |
| Danfoss IP55 enclosure for KP single version | 060-033066 | | |
| Danfoss IP55 enclosure for KP double version | 060-035066 | | |
| KP5 Weather Cover | 060-003166 | | |

| | | | |
|---|---------|--|------|
| OIL FAILURE CONTROL | | | |
| Danfoss Oil failure control MP55 Time Delay | 60B0172 | | MP55 |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|------------------------------|----------|-------|-------|
| T 2 TX VALVES - FLARE | | | |
| Danfoss TX Valve TES2 Flare | 068Z3403 | R404A | TES2 |
| Danfoss TX Valve TEN2 Flare | 068Z3348 | R134A | TEN2 |
| Danfoss TX Valve TEX2 Flare | 068Z3209 | R22 | TEX2 |
| Danfoss TX Valve TS2 Flare | 068Z3400 | R404A | TS2 |
| Danfoss TX Valve TN2 Flare | 068Z3346 | R134A | TN2 |
| Danfoss TX Valve TX2 Flare | 068Z3206 | R22 | TX2 |

| T 2 TX VALVES - SOLDER | | | |
|-------------------------------|----------|-------|-------|
| Danfoss TX Valve TES2 Solder | 068Z3415 | R404A | TES2s |
| Danfoss TX Valve TEN2 Solder | 068Z3385 | R134A | TEN2s |
| Danfoss TX Valve TEX2 Solder | 068Z3284 | R22 | TEX2s |
| Danfoss TX Valve TS2 Solder | 068Z3414 | R404A | TS2s |
| Danfoss TX Valve TN2 Solder | 068Z3383 | R134A | TN2s |
| Danfoss TX Valve TX2 Solder | 068Z3281 | R22 | TX2s |

| T 2 ORIFICE | | | |
|-------------------------|----------|--|--------|
| Danfoss T2 Orifice - 0X | 068-2002 | | T2O-0X |
| Danfoss T2 Orifice - 00 | 068-2003 | | T2O-00 |
| Danfoss T2 Orifice - 01 | 068-2010 | | T2O-01 |
| Danfoss T2 Orifice - 02 | 068-2015 | | T2O-02 |
| Danfoss T2 Orifice - 03 | 068-2006 | | T2O-03 |
| Danfoss T2 Orifice - 04 | 068-2007 | | T2O-04 |
| Danfoss T2 Orifice - 05 | 068-2008 | | T2O-05 |
| Danfoss T2 Orifice - 06 | 068-2009 | | T2O-06 |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|--|----------|------|----------|
| T 2 TX VALVES WITH MOP | | | |
| Danfoss TES2 MOP50 Flare -40° to -15° | 068Z3409 | | TES2M50 |
| Danfoss TS2 MOP50 Flare -40° to -15° | 068Z3408 | | TS2M50 |
| Danfoss TES2 MOP120 Flare -40° to +10° | 068Z3405 | | TES2M120 |
| Danfoss TS2 MOP120 Flare -40° to +10° | 068Z3402 | | TS2M120 |

| TUA STAINLESS STEEL TX VALVES | | | |
|--------------------------------------|----------|--|----------|
| Danfoss TUA R404A TX Valve | 068U2285 | | TUA 404 |
| Danfoss TUAE R404A TX Valve | 068U2287 | | TUAE 404 |
| Danfoss TUAE 134A TX Valve | 068U2207 | | TUAE 134 |

| TUA STAINLESS STEEL ORIFICE | | |
|------------------------------------|----------|-------|
| Danfoss TUA Orifice 00 | 068U1030 | TUA00 |
| Danfoss TUA Orifice 01 | 068U1031 | TUA01 |
| Danfoss TUA Orifice 02 | 068U1032 | TUA02 |
| Danfoss TUA Orifice 03 | 068U1033 | TUA03 |
| Danfoss TUA Orifice 04 | 068U1034 | TUA04 |
| Danfoss TUA Orifice 05 | 068U1035 | TUA05 |
| Danfoss TUA Orifice 06 | 068U1036 | TUA06 |
| Danfoss TUA Orifice 07 | 068U1037 | TUA07 |
| Danfoss TUA Orifice 08 | 068U1038 | TUA08 |
| Danfoss TUA Orifice 09 | 068U1039 | TUA09 |

| T 5 THERMOSTATIC ELEMENT | | |
|---------------------------------|----------|-----------|
| Danfoss TES 5 Element | 067B3342 | TES 5 EI |
| Danfoss TEN 5 Element | 067B3297 | TEN 5 EI |
| Danfoss TEX 5 Element | 067B3250 | TEX 5 EI |
| Danfoss TES 5 Element with MOP | 067B3358 | TES 5 EIM |

| T 5 BODY | | |
|---|----------|----------|
| Danfoss T 5 Body Sol. Straight 1/2" x 5/8" | 068B4007 | T5SS1258 |
| Danfoss T 5 Body Sol. Straight 1/2" x 7/8" | 068B4008 | T5SS1278 |
| Danfoss T 5 Body Sol. Angleway 1/2" x 5/8" | 068B4009 | T5SA1258 |
| Danfoss T 5 Body Sol. Angleway 1/2" x 7/8" | 068B4010 | T5SA1278 |
| Danfoss T 5 Body Sol. Angleway 5/8" x 7/8" | 068B4011 | T5SA5878 |
| Danfoss T 5 Body Flare Angleway 5/8" x 7/8" | 068B4013 | T5FA5878 |

| T 5 ORIFICE | | |
|------------------------|----------|--------|
| Danfoss T 5 Orifice 01 | 067B2789 | T5O-01 |
| Danfoss T 5 Orifice 02 | 067B2790 | T5O-02 |
| Danfoss T 5 Orifice 03 | 067B2791 | T5O-03 |
| Danfoss T 5 Orifice 04 | 067B2792 | T5O-04 |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|----------|----------------|------------|
| T 12 THERMOSTATIC ELEMENT | | | |
| Danfoss TES 12 Element | 067B3347 | | TES 12 E |
| Danfoss TEN 12 Element | 067B3232 | | TEN 12 E |
| Danfoss TEX 12 Element | 067B3210 | | TEX 12 E |
| T 12 BODY | | | |
| Danfoss T 12 Body 5/8" ODF x 7/8"ODF Straight | 068B4020 | | T125878S |
| Danfoss T 12 Body 7/8"ODF x 1 1/8" ODM Straight | 068B4021 | | T1278118S |
| Danfoss T 12 Body 5/8" ODF x 7/8"ODF Angle | 068B4022 | | T125878A |
| Danfoss T 12 Body 7/8"ODF x 1 1/8" ODM Angle | 068B4023 | | T1278118A |
| T 12 ORIFICE | | | |
| Danfoss T 12 Orifice 01 | 067B2005 | | T120-01 |
| Danfoss T 12 Orifice 02 | 067B2006 | | T120-02 |
| Danfoss T 12 Orifice 03 | 067B2007 | | T120-03 |
| Danfoss T 12 Orifice 04 | 067B2008 | | T120-04 |
| T 20 THERMOSTATIC ELEMENT | | | |
| Danfoss TES 20 | 067B3352 | | |
| Danfoss TEN 20 | 067B3292 | | |
| Danfoss TEX 20 | 067B3274 | | |
| T 20 BODY | | | |
| Danfoss T12/20 Body 7/8" x 1 1/8" Straight | 067B4021 | | |
| T 20 ORIFICE | | | |
| Danfoss TE 20 Orifice | | | |
| Danfoss TE 20 Orifice | | | |
| Danfoss TE 20 Orifice | | | |
| T 55 THERMOSTATIC ELEMENT | | | |
| Danfoss TES 55 Element | 067G3301 | TES E | |
| T 55 BODY | | | |
| Danfoss T55 Body 1 1/8 ODF x 1 3/8" ODM Solder Angle | 067G4004 | 1-1/8 X 1-3/8' | T55118138S |
| Danfoss T55 Body 1 1/8 ODF x 1 3/8" ODM Solder Straight | 067G4003 | 1-1/8 X 1-3/8' | T55118138A |
| T 55 ORIFICE | | | |
| Danfoss TE 55 Orifice | 067G2011 | | TES-1 |
| Danfoss TE 55 Orifice | 067G2012 | | TES-2 |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|----------|------|-------|
| EVR SOLENOID VALVE - FLARE | | | |
| Danfoss solenoid valve - 1/4" Flare EVR3 | 032F8107 | 1/4" | EVR3 |
| Danfoss solenoid valve - 3/8" Flare EVR3 | 032F8116 | 3/8" | EVR3 |
| Danfoss solenoid valve - 3/8" Flare EVR6 | 032F8072 | 3/8" | EVR6 |
| Danfoss solenoid valve - 1/2" Flare EVR6 | 032F8079 | 1/2" | EVR6 |
| Danfoss solenoid valve - 1/2" Flare EVR10 | 032F8095 | 1/2" | EVR10 |
| Danfoss solenoid valve - 5/8" Flare EVR10 | 032F8098 | 5/8" | EVR10 |
| Danfoss solenoid valve - 5/8" Flare EVR15 | 032F8101 | 5/8" | EVR15 |

| | | | |
|--|----------|--------|--------|
| EVR SOLENOID VALVE - SOLDER | | | |
| Danfoss solenoid valve - 1/4" Solder EVR3 | 032F1206 | 1/4" | EVR3S |
| Danfoss solenoid valve - 3/8" Solder EVR3 | 032F1204 | 3/8" | EVR3s |
| Danfoss solenoid valve - 3/8" Solder EVR6 | 032F1212 | 3/8" | EVR6S |
| Danfoss solenoid valve - 1/2" Solder EVR6 | 032F1209 | 1/2" | EVR6s |
| Danfoss solenoid valve - 1/2" Solder EVR10 | 032F1217 | 1/2" | EVR10s |
| Danfoss solenoid valve - 5/8" Solder EVR10 | 032F1214 | 5/8" | EVR10s |
| Danfoss solenoid valve - 5/8" Solder EVR15 | 032F1228 | 5/8" | EVR15s |
| Danfoss solenoid valve - 7/8" Solder EVR15 | 032F1225 | 7/8" | EVR15s |
| Danfoss solenoid valve - 7/8" Solder EVR20 | 032F1240 | 7/8" | EVR20s |
| Danfoss solenoid valve - 1 1/8" Solder EVR25 | 032F2201 | 1 1/8" | EVR25s |
| Danfoss solenoid valve - 1 3/8" Solder EVR32 | 042H1106 | 1 3/8" | EVR32s |

| | | | |
|--|----------|--------|---------|
| EVR SOLENOID COIL | | | |
| Danfoss solenoid coil 240VAC | 018F6702 | 240VAC | SC240AC |
| Danfoss solenoid coil 240VAC with lead | 018F6252 | 240vAC | SC240AC |
| Danfoss solenoid coil 24VAC | 018F6707 | 24VAC | SC24AC |
| Danfoss solenoid coil 24VDC | 018F6857 | 24VDC | SC24DC |
| Danfoss solenoid coil 12VDC | 018F6856 | 12VDC | SC12DC |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|----------|------|-------|
| KVC CAPACITY REGULATOR - FLARE | | | |
| Danfoss capacity regulator - 1/2" Flare | 034L0141 | 1/2" | KVC12 |
| Danfoss capacity regulator - 5/8" Flare | 034L0142 | 5/8" | KVC15 |

| | | | |
|--|----------|------|--------|
| KVC CAPACITY REGULATOR - SOLDER | | | |
| Danfoss capacity regulator - 1/2" Solder | 034L0143 | 1/2" | KVC12S |
| Danfoss capacity regulator - 5/8" Solder | 034L0147 | 5/8" | KVC15S |
| Danfoss capacity regulator - 7/8" Solder | 034L0144 | 7/8" | KVC22S |

| | | | |
|--|----------|------|-------|
| KVP EVAPORATOR PRESSURE REGULATOR - FLARE | | | |
| Danfoss evap pressure regulator 1/2" Flare | 034L0021 | 1/2" | KVP12 |
| Danfoss evap pressure regulator 5/8" Flare | 034L0022 | 5/8" | KVP15 |

| | | | |
|---|----------|--------|--------|
| KVP EVAPORATOR PRESSURE REGULATOR - SOLDER | | | |
| Danfoss evap pressure regulator 1/2" Solder | 034L0023 | 1/2" | KVP12S |
| Danfoss evap pressure regulator 5/8" Solder | 034L0029 | 5/8" | KVP15S |
| Danfoss evap pressure regulator 7/8" Solder | 034L0025 | 7/8" | KVP22S |
| Danfoss evap pressure regulator 1-1/8" Solder | 034L0026 | 1-1/8" | KVP28S |
| Danfoss evap pressure regulator 1-3/8" Solder | 034L0032 | 1-3/8" | KVP35S |

| | | | |
|---|----------|------|-------|
| KVL CRANK CASE PRESSURE REGULATOR - FLARE | | | |
| Danfoss crank case regulator - 1/2" Flare | 034L0041 | 1/2" | KVL12 |
| Danfoss crank case regulator - 5/8" Flare | 034L0042 | 5/8" | KVL15 |

| | | | |
|--|----------|--------|--------|
| KVL CRANK CASE PRESSURE REGULATOR - SOLDER | | | |
| Danfoss crank case regulator - 1/2" Solder | 034L0043 | 1/2" | KVL12s |
| Danfoss crank case regulator - 5/8" Solder | 034L0049 | 5/8" | KVL15s |
| Danfoss crank case regulator - 7/8" Solder | 034L0045 | 7/8" | KVL22s |
| Danfoss crank case regulator - 1 1/8" Solder | 034L0046 | 1 1/8" | KVL28s |
| Danfoss crank case regulator - 1 3/8" Solder | 034L0052 | 1 3/8" | KVL35s |

DANFOSS COMPONENTS

| DESCRIPTION | CODE | SIZE | MODEL |
|---|---------|------|--------|
| COMPRESSOR HEATER | | | |
| Danfoss Maneurop crank case heater | 7773001 | 35w | MCCH |
| Danfoss Maneurop crank case heater belt | 7773107 | 65w | MCCH65 |
| Danfoss Maneurop crank case heater belt | 7773108 | 75w | MCCH75 |

| | | | |
|-------------------------------|---------|--|--|
| ACOUSTIC HOODS | | | |
| Acoustic hood Comp 2 Cylinder | 7755002 | | |
| Acoustic hood Comp 4 Cylinder | 7755003 | | |
| Acoustic hood Comp S110-120 | 7755010 | | |

| | | | |
|--|---------|-------|---------|
| SINGLE PHASE START KIT | | | |
| Danfoss 100µf single phase start kit- No Box | 7701022 | 100µf | SK100µf |
| Danfoss 135µf single phase start kit -No Box | 7701023 | 135µf | SK135µf |

| | | | |
|--|---------|-----------|---------|
| MANEUROP COMPRESSOR MOUNTS | | | |
| Danfoss ASM 1 and 2 CYL Maneurop mounts | 8156001 | MT18-40 | 1CYLMNT |
| Danfoss ASM 4 CYL Maneurop mounts | 8156007 | MT100-160 | 4CYLMNT |
| Proforma Scroll Rubber Grommets S084-185 | 8156138 | S084-185 | |

| | | | |
|---|---------|-----|-------|
| MANEUROP AND PERFORMER OIL | | | |
| Danfoss POE lubricant, 160PZ, 2 litre can | 7754020 | MTZ | 160PZ |
| Danfoss POE lubricant, 160Z, 2 litre can | 7754026 | LTZ | 160Z |
| Danfoss POE lubricant, 160SZ, 2 litre can | 7754024 | SZ | 160SZ |
| Danfoss Mineral oil, 160P, 5 litre can | 7754002 | SM | 160P |

| | | | |
|---|---------|--|--|
| BAKERLITE TERMINAL BLOCK CONNECTOR | | | |
| T block connector 52 x 57 mm MT100-160 | 8173230 | | |
| T block connector 60 x 75 mm SM160-185 | 8173021 | | |

| | | | |
|--|---------|-----------|--|
| Terminal box 186 x 198 mm, incl cover (48) | 8156139 | SM115-185 | |
|--|---------|-----------|--|

| | | | |
|-------------|---------|--|-----|
| S90 Adaptor | 7765006 | | S90 |
|-------------|---------|--|-----|